


LP24 RELAY PANEL 8-RELAY, 12-CONTACTOR CAPACITY

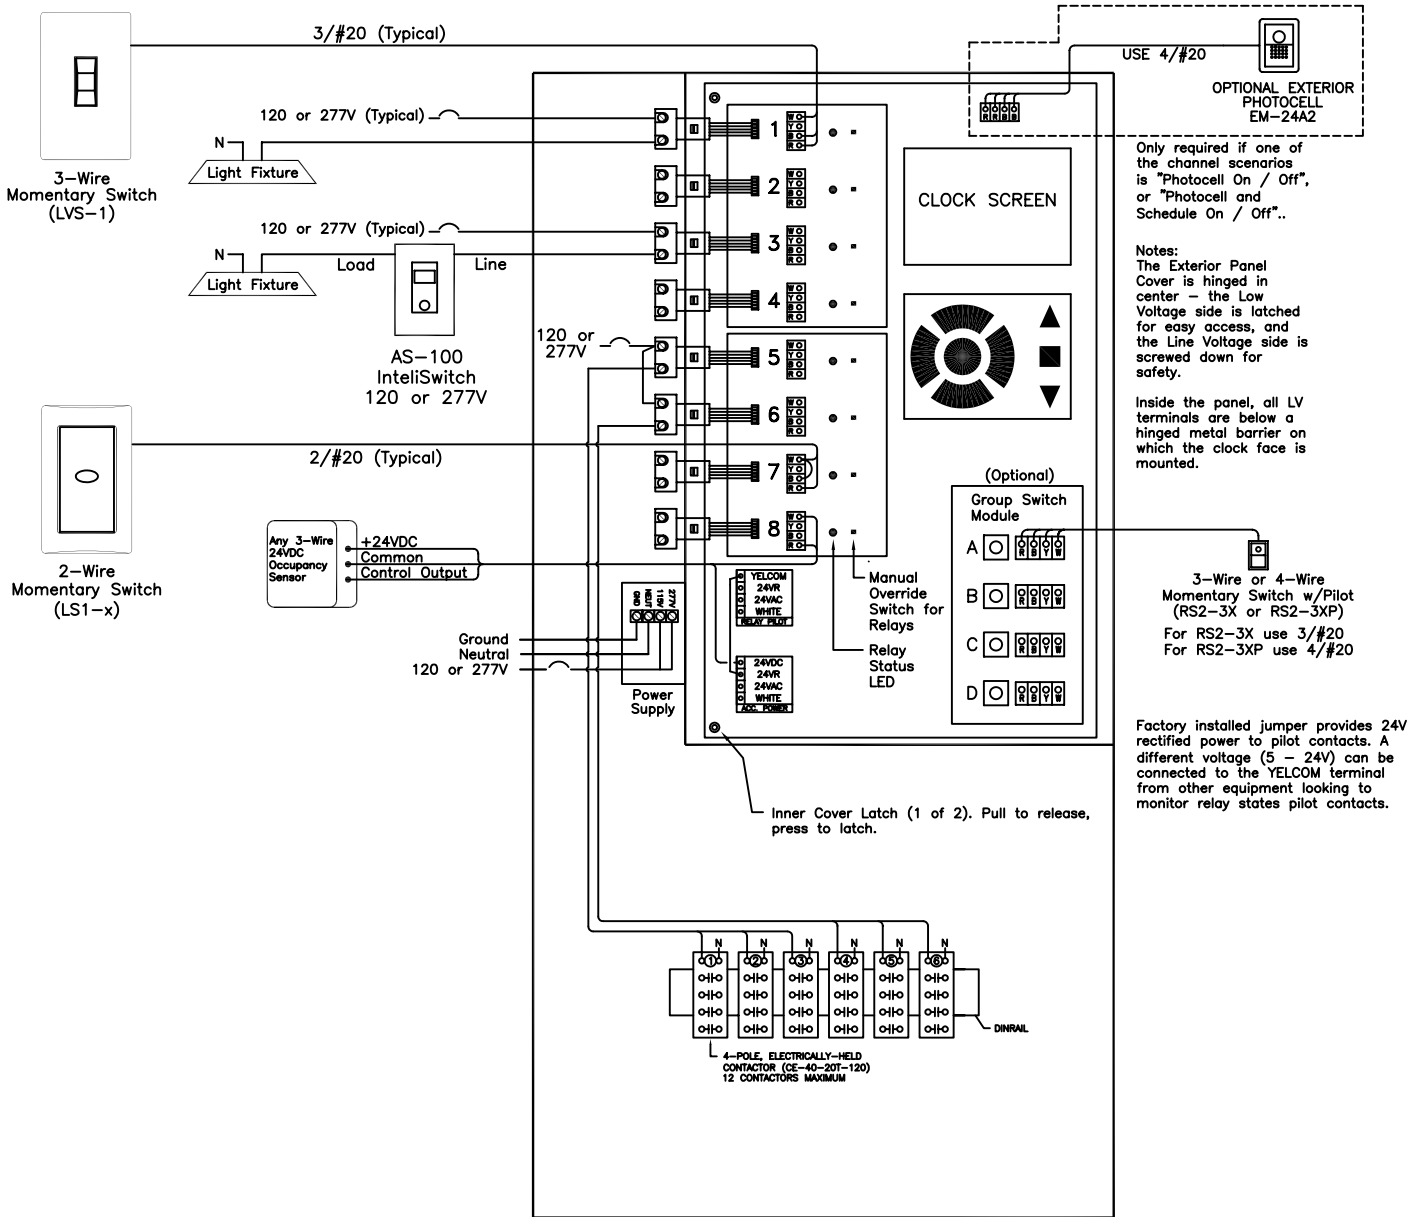

Only required if one of the channel scenarios is "Photocell On / Off", or "Photocell and Schedule On / Off"..

Notes:
The Exterior Panel Cover is hinged in center - the Low Voltage side is latched for easy access, and the Line Voltage side is screwed down for safety.

Inside the panel, all LV terminals are below a hinged metal barrier on which the clock face is mounted.

3-Wire or 4-Wire Momentary Switch w/Pilot (RS2-3X or RS2-3XP)
For RS2-3X use 3/#20
For RS2-3XP use 4/#20

Factory installed jumper provides 24V rectified power to pilot contacts. A different voltage (5 - 24V) terminal from other equipment looking to monitor relay states pilot contacts.

THE WATT STOPPER			
800-879-8585			
Title		Typical LP-24 Relay Panel	
Scale	Drawing#	Date	Rev.
	Custom	11/28/05	